


SPIRIT

PEEKABOO CLOWN

Installation and Operating Instructions

Keep all plastic and wire parts away from children.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

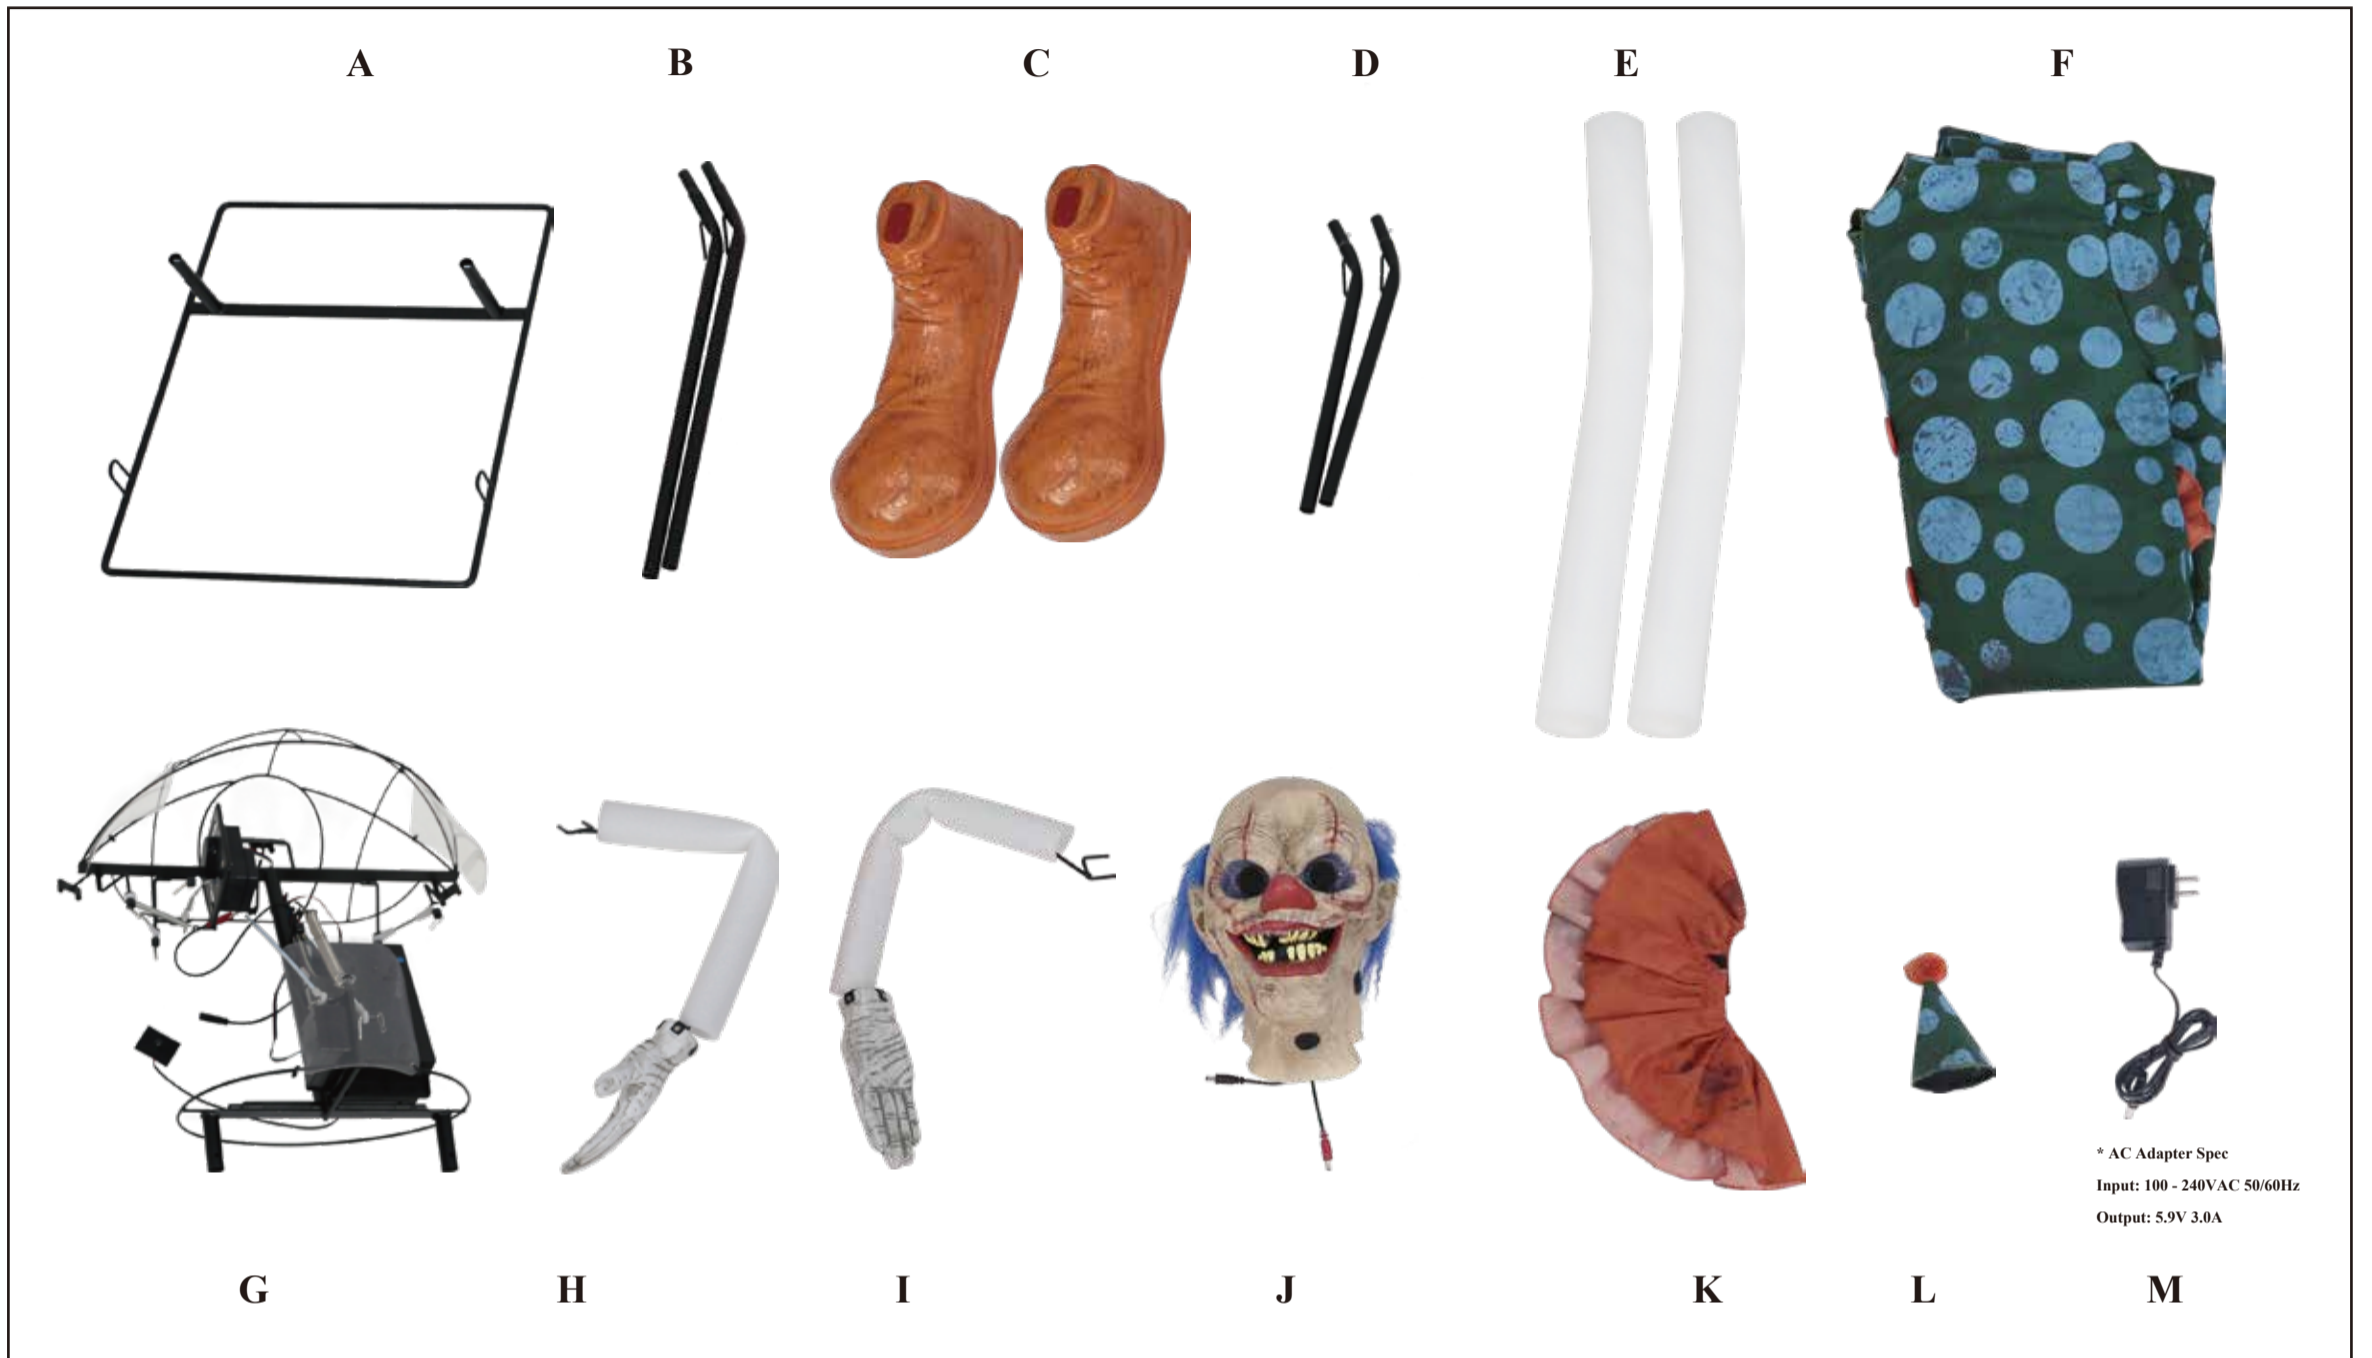





* AC Adapter Spec
Input: 100 - 240VAC 50/60Hz
Output: 5.9V 3.0A

PARTS:


- | | |
|-----------------------------------|---------------------------|
| A. Base x 1 | H. Left Arm x 1 |
| B. Lower Support Poles x 2 | I. Right Arm x 1 |
| C. Shoes x 2 | J. Head x 1 |
| D. Upper Support Poles x 2 | K. Neck Ruffle x 1 |
| E. Foam Tubes x 2 | L. Hat x 1 |
| F. Costume x 1 | M. Adapter x 1 |
| G. Torso Frame x 1 | |

Assembly:


1. Attach the (B) Lower Support Poles to the (A) Base using the available quick connect push buttons and pre-drilled holes as shown.
2. Lower the (C) Shoes over the (B) Lower Support Poles and let them rest on the (A) Base as shown.
3. Connect the (D) Upper Support Poles to the (B) Lower Support Poles using the available quick connect push buttons and pre-drilled holes as shown.
4. Slide the (E) Foam Tubes over the assembled support poles as shown.

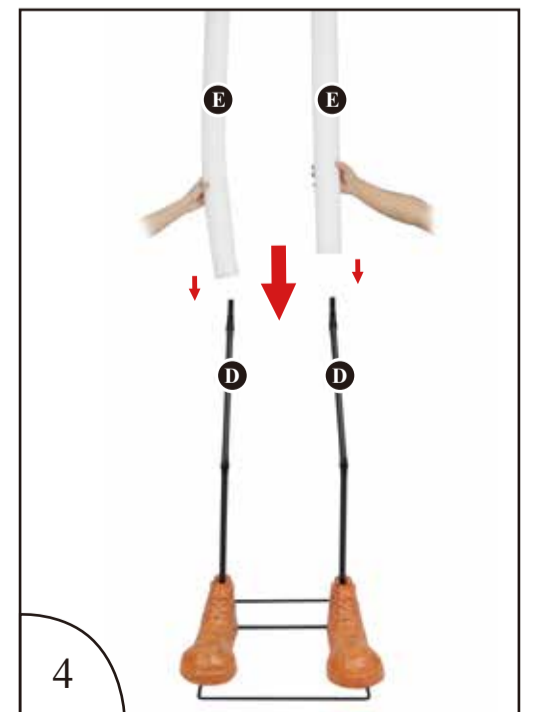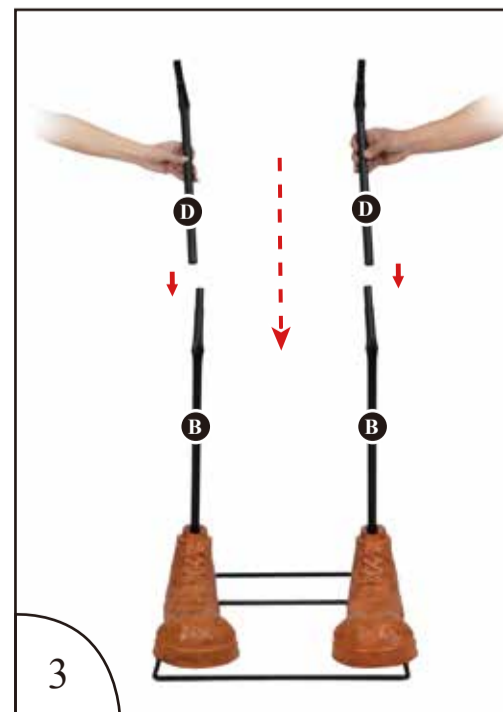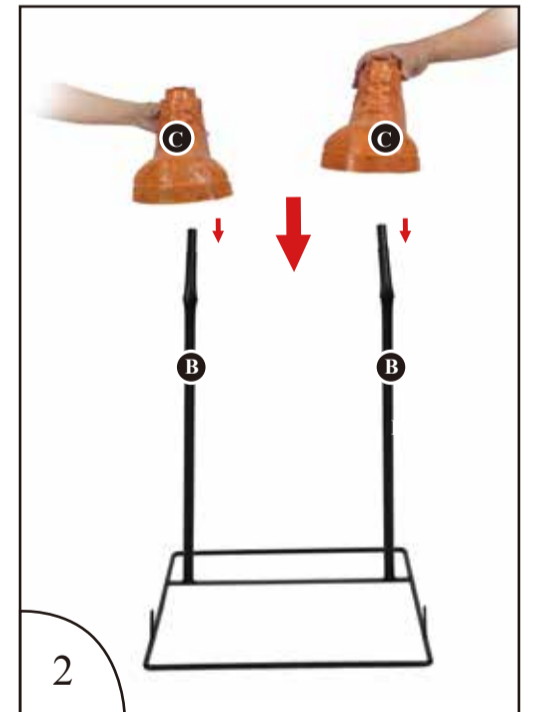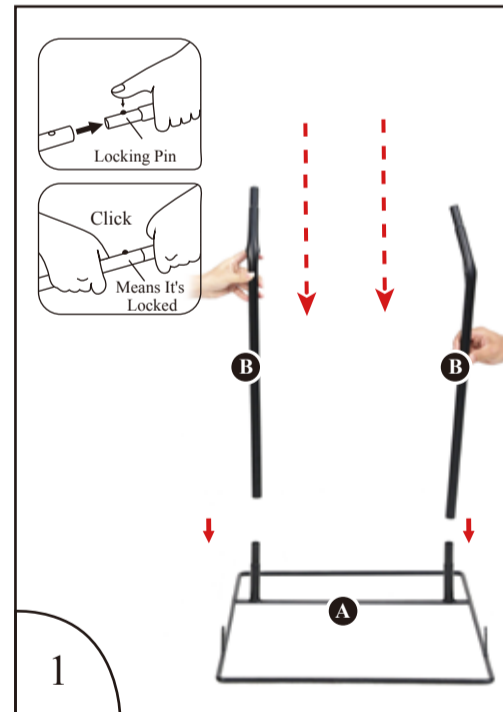


5. Slide the (F) Costume pant legs over the assembly with the opening of the (F) Costume towards the back. Let the (F) Costume rest over the assembly as shown.

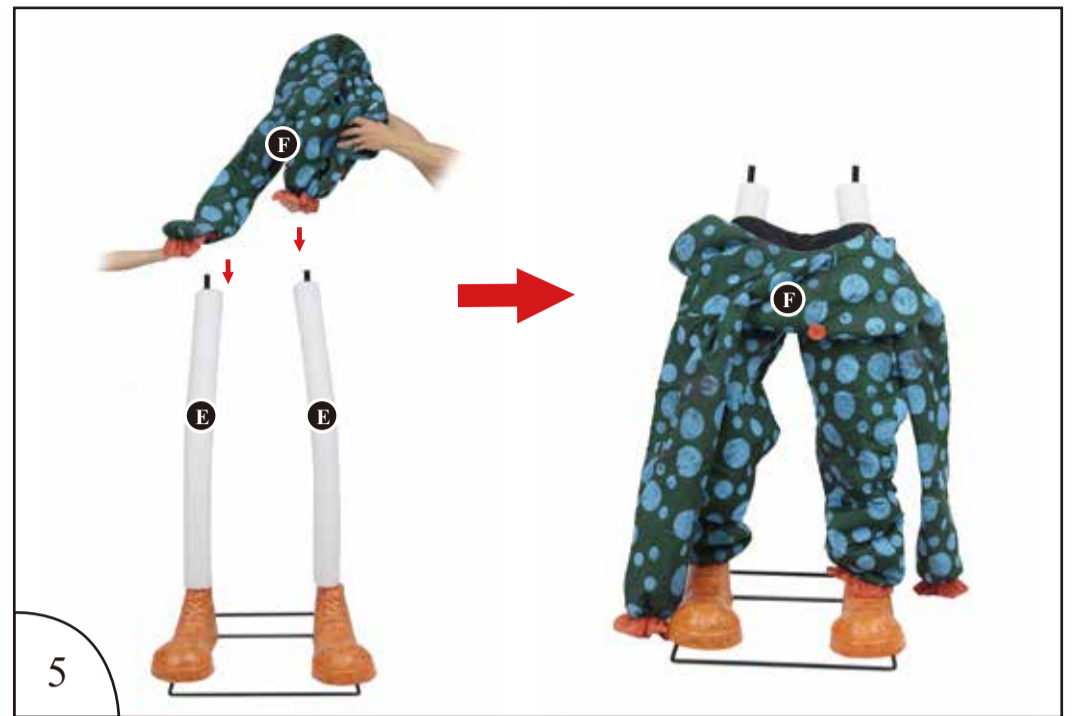


6. Attach the (G) Torso Frame to the (D) Upper Support Poles using the available quick connect push buttons and pre-drilled holes as shown.

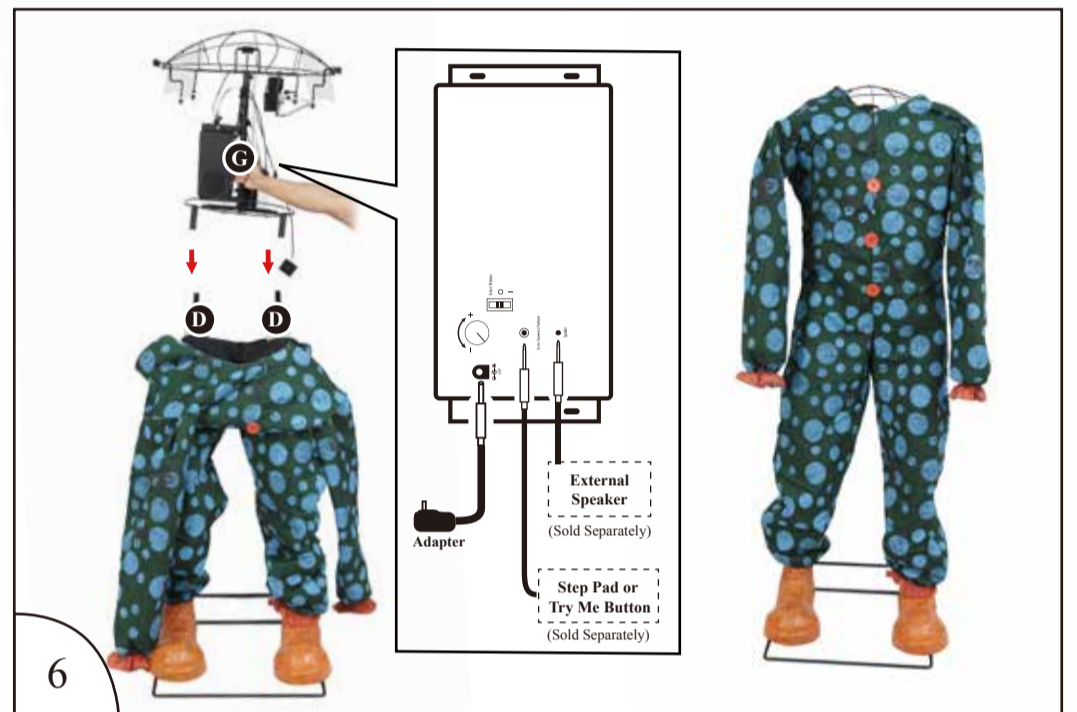

7. Slide the forked hook end of the (H) Left Arm up through the left sleeve of the (F) Costume. Then set the forked hook of the (H) Left Arm into the housing available on the left side of the (G) Torso Frame as shown.

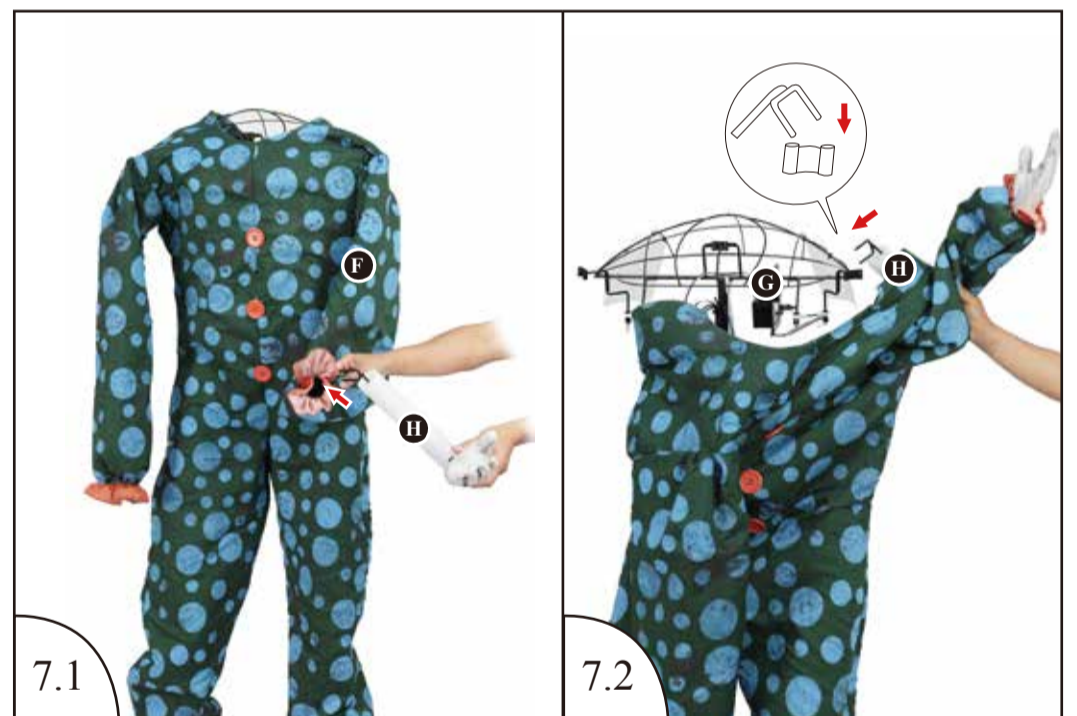


8. Slide the forked hook end of the (I) Right Arm into the right sleeve of the (F) Costume. Then set the forked hook of the (I) Right Arm into the housing available at the right side of the (G) Torso Frame as shown.

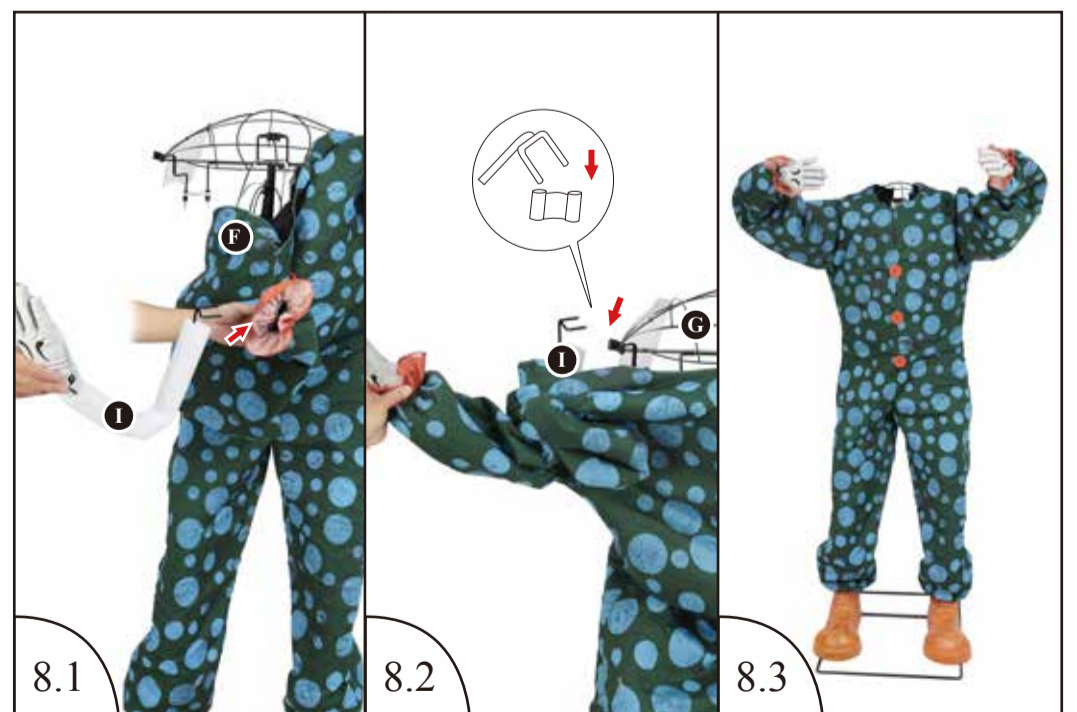


9. Slide the forked hook available under the (J) Head into the housing available at the top of the (G) Torso Frame as shown.



10. Secure the Sensor from the Function Control Box on the (G) Torso Frame to the (F) Costume using the available hook & loop closures as shown.

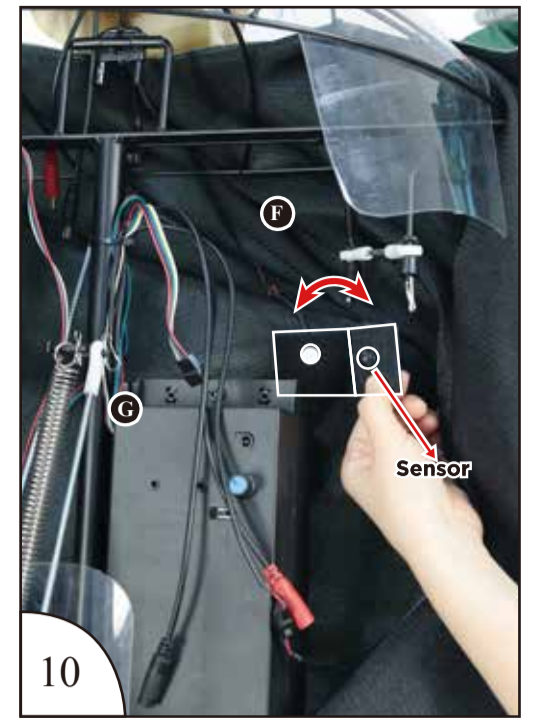

11. Connect all cables to their corresponding cable by color as shown. Connect the matching motor cables from the Function Control Box and the Motor as shown.

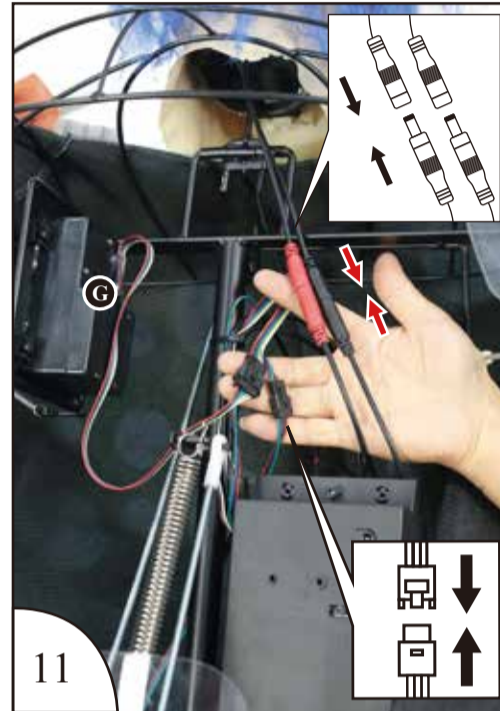

12. Secure all the hook & loop closures at the back of the (F) Costume as shown.



13. Secure the hook & loop closures between the (K) Collar and the neck of the head (J) Head as shown.



14. Place the (L) Hat on top of the (J) Head as shown.



Your Peekaboo Clown is now fully assembled. Plug in and turn on to let the fun begin!

IMPORTANT INFORMATION:

1. The infrared sensor distance and ambient temperature are directly related. When the body temperature (98.6° F) is different to the ambient air temperature, the infrared sensor distance will be farther. When the body temperature (98.6° F) is close to the ambient air temperature, the infrared sensor distance will be shorter.
2. Do not use this item in an environment where air currents are caused by a window, air conditioning, or air outlet.
3. Do not have the infrared sensor face a direct source of heat such as a heater.



OPTIONAL STEP PAD SETUP

Follow steps 1 through 6 on the installation instructions first, then:

1. Connect the wire from the optional Step Pad to the jack labeled "STEP PAD" on the control box. See Fig. 15.
2. Step on the Step Pad to activate the prop. See Fig. 16.

Step Pad (SKU #01181288) is sold separately and can be purchased in-store and online at www.SpiritHalloween.com




OPTIONAL EXTERNAL SPEAKER SETUP

This prop can be played through an external speaker (sold separately). To use this feature, follow steps 1 through 6 on the installation instructions first, then:

1. Connect the wire from your external speaker to the jack labeled “SPEAKER” on the control box. See Fig. 17.
2. Adjust the volume level to suit. See Fig. 18.


Note: Use external speakers with an impedance of 8 ohms only.

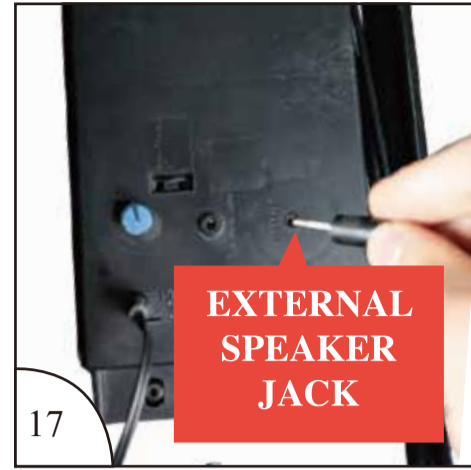

OPTIONAL MULTI-PROP REMOTE SETUP

Follow steps 1 through 6 on the installation instructions first, then:


1. Connect one of the transponders to the prop by inserting the wire of the transponder into either the Try Me or Step Pad jack as labeled on the control box. See Fig. 19.
2. Flip the switch on the transponder to the ON position. Click the button on the Multi-Prop Remote that matches the letter on the transponder to activate the prop. See Fig. 20 .

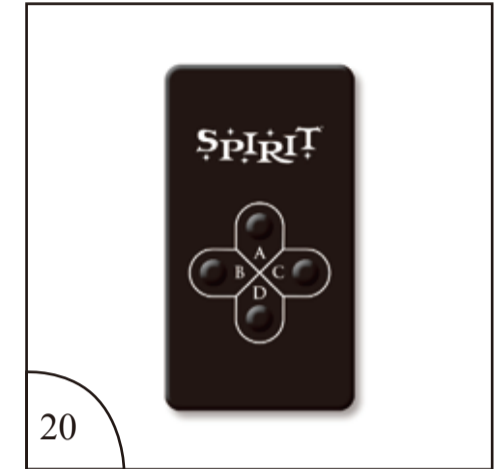

OPTIONAL BATTERY ADAPTER SETUP


Follow steps 1 through 6 on the installation instructions first, then:

1. Install 4 D Batteries into Spirit Battery Adapter. See Fig. 21 .
2. Connect wire from Spirit Battery Adapter to the 5.9V3.0A adapter port on the control box. See Fig. 22.
3. Turn switch on Battery Adapter to the ON position to power the prop.

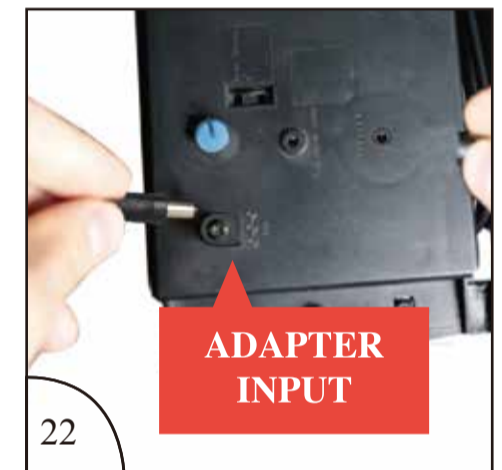

OPERATION INSTRUCTIONS

1. Plug the Power Adapter into a standard power outlet and adjust the settings on the Function Control Box to your liking.
2. Peekaboo Clown has 3 operation settings which can be found on the main Function Control Box on the (G) Torso Frame:
 - Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
 - “ I ” On: This switch mode will continuously operate the lights, sound, and animation of the item.
 - “ O ” Off/Try-Me: This switch mode allows the item to be activated only if triggered by using a Step Pad or Try Me Button (Not included). The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step 3 for further details.
 - “ - + ” Volume: Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

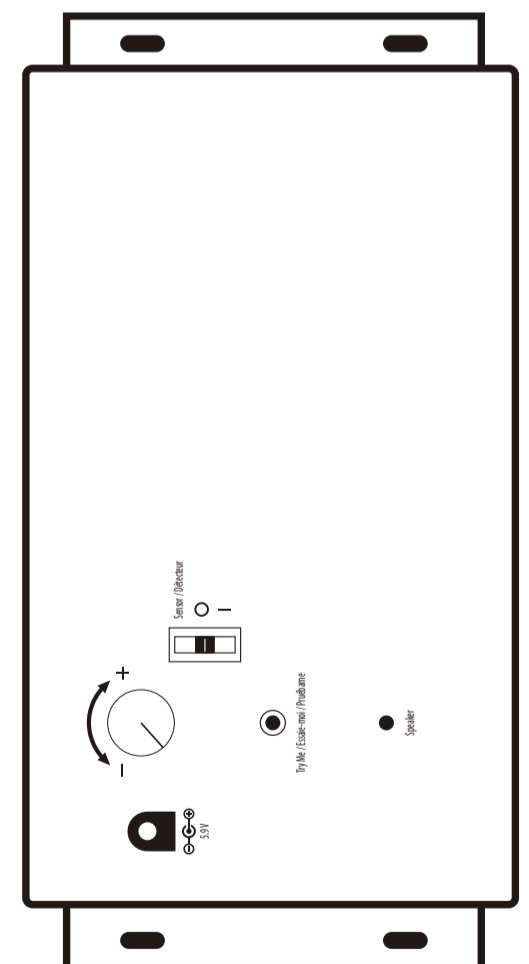

Care and Storage Instructions

For best performance operate your item indoors. When not in use, store this product in it's original packaging. Keep away from heat and moisture.

- Please use the transformer supplied by manufacturer.
- Please assemble item according to instructions. Connect all wires according to matching color.
- Children should be supervised by adults. The item should not be grabbed, as it becomes a tipping hazard. Keep all away from the transformer, as it heats up during operation.

Trouble Shooting Steps

- Be sure to assemble on a flat surface.
- Only use the power adapter that came with this item.
- Make sure all cables are connected securely before operation. NOTE that cables are color-coded and could affect function if not connected correctly.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

BATTERY INSTALLATION


Battery installation should be performed by an adult.

- Use only batteries recommended in the instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, rechargeable, standard, or different types of batteries.
- Be mindful to insert batteries with correct polarity as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from toy before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.

WARNINGS:

- **This product is designed for indoor or covered porch use only, and should not be placed outdoors subject to the weather.**
- **This item is not a toy. For decoration only.**
- **Choking hazard due to small parts.**
- **Keep all plastic and wire parts away from children.**
- **This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 and under.**

Questions about setup? Prop not working?
There's no need to go back to the store, just...

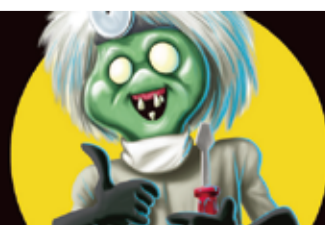

ASK DR. ZOMBIE!

He's dying to bring your prop to life!

✉ DrZombie@SpiritHalloween.com ☎ 1.866.586.0155