



COTTON CANDY DAN

Assembly & Operating Instructions

PLEASE KEEP A COPY OF YOUR RECEIPT WITH THESE INSTRUCTIONS.

WARNING: Do not turn prop on until fully assembled. Stay clear of the prop while operating. Keep all plastic & wire parts away from children.

Prop is intended for use with included components. For optimum performance, do not add additional weight onto prop.

2 people are recommended for assembly.



Questions about setup?
There's no need to go back to the store.
Ask the Zombie Tech Squad!
They're dying to bring your prop to life!
ZTechSquad@SpiritHalloween.com
1-866-586-0155



PARTS:

FRAME:

A



B



C



D



A. Metal Base

B. Leg Poles (x4)

C. Waist & Spine Frame with Control Box

D. 6V 2A Power Adapter

FIGURE:

E



F



G



H



I



E. Shoes (x2)

H. Head

F. Clown Head & Torso

I. Middle Stirring Pole

G. Bucket

DRESSING:

J



J. Pants

ASSEMBLY

1

Place the Metal Base (Part A) on a flat suitable surface.
Snap lock the Lower Leg Poles (Part B) to the Metal Base (Part A). (Match A to A)

2

Slide the Shoes (Part E) over the Leg Poles (Part B) down to the Metal Base (Part A).

3

Snap lock the Upper Leg Poles (Part B) to the Lower Leg Poles (Part B). (Match B to B)

4

Slide the Pants (Part J) over the Leg Poles (Part B) down to the Metal Base (Part A).

5

Snap lock the Waist & Spine Frame (Part C) to the Upper Leg Poles (Part B). (Match C to C)

6

Insert the Waist Hoop posts inside the Pants (part J) into the Waist Frame (part C).

7

Snap lock the Clown Head & Torso (Part F) to the Waist & Spine Frame (Part C). (Match D to D)

8

Place the Bucket (part G) on the Metal Base (part A) and lock it with the Clevis & Cotter Pin.

9

Lock the Head (part H) to the inside of the Bucket (part G) with the Clevis & Cotter Pin. (Match E to E)

10

Connect wire from the Head (part H) to the wire in the Bucket (part G). (Match F to F)

11

Snap lock the Middle Stirring Pole (part I) to top of the Head (part H). (Match G to G)

12


Ball snap lock the Hands with Upper Pole (Part F) to the Middle Stirring Pole (part I). (Match H to H)

NOTE: Use a screwdriver or other tool to depress the ball snap lock. With the ball depressed separate the poles for disassembly.

ASSEMBLY



13
Connect the wires from the Bucket, Human Sensor, Head, Clown Head & Torso, and Safety Switch to the corresponding wires from the Control Box (Part C). (Match I to I) (Match J to J) (Match K to K) (Match L to L) (Match M to M)

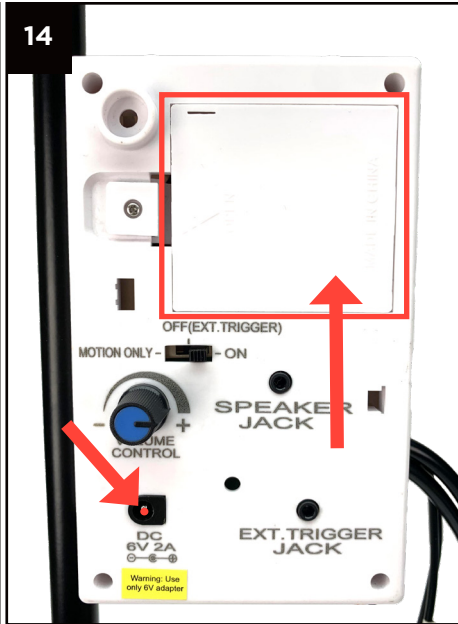

14
Plug in the 6V 2A ADAPTER (included) or insert 4 AA batteries (not included) into the CONTROL BOX.


Turn the switch to the ON position to activate the item. The item will reset to the down position. Item is ready to activate.

Sound or motion will activate the item. Move switch to MOTION for motion only activation. STAY CLEAR of the item during operation. Turn item OFF when not in use.

IMPORTANT INFORMATION

1. The infrared sensor distance & ambient temperature are directly related. When the body temperature (98.6° F) is different to the ambient air temperature, the infrared sensor distance will be farther. When the body temperature (98.6° F) is close to the ambient air temperature, the infrared sensor distance will be shorter.
2. Do not use this item in an environment where air currents are caused by a window, air conditioning, or air outlet.
3. Do not have the infrared sensor face a direct source of heat such as a heater.

OPTIONAL STEP PAD SETUP

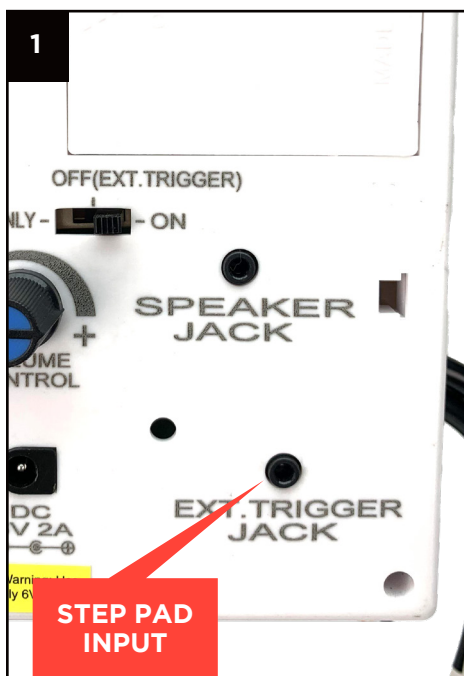

Follow steps 1 through 14 on the assembly instructions, then connect the wire from the optional Step Pad to the jack labeled "EXT TRIGGER JACK" on the control box.




Step on the Step Pad to activate the prop. Step Pad is sold separately & can be purchased in-store & online at www.SpiritHalloween.com

OPTIONAL EXTERNAL SPEAKER SETUP



Follow steps 1 through 14 on the assembly instructions, then connect the wire from your external speaker to the jack labeled "SPEAKER JACK" on the control box.

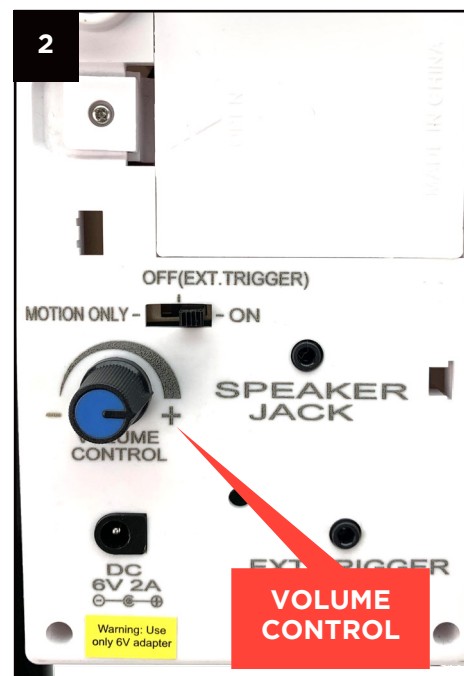

Use volume control to adjust volume level to suit. Note: External speaker is sold separately. Use external speakers with an impedance of 8 ohms only.

OPTIONAL MULTI-PROP REMOTE SETUP



Follow steps 1 through 14 on the assembly instructions, then connect one of the transponders to the prop by inserting the wire of the transponder into either the Try Me or Step Pad jack as labeled on the control box.




Press the corresponding button on the Multi-Prop Remote to activate prop. Multi-Prop Remote is sold separately & can be purchased in-store & online at www.SpiritHalloween.com

OPTIONAL BATTERY ADAPTER SETUP



Follow steps 1 through 14 on the assembly instructions first, then install 4 D 1.5 V Batteries into Spirit Battery Adapter. Spirit Battery Adapter is sold separately & can be purchased in-store & online at www.SpiritHalloween.com

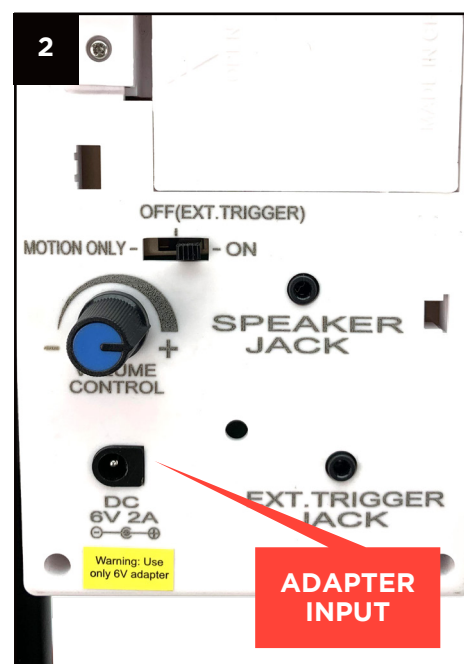

Connect wire from Spirit Battery Adapter to the 6V 2A adapter port on the control box. Turn switch on Battery Adapter to the ON position to power the prop.

BATTERY INSTALLATION

- Battery installation should be performed by an adult.
- Use only batteries recommended in the instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, rechargeable, standard, or different types of batteries.
- Be mindful to insert batteries with correct polarity as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from prop before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited

WARNINGS

- This product is designed for indoor or covered porch use only, and should not be placed outdoors subjected to the weather. Operating item in high winds is not recommended. (20 mph or greater)
- This item is not a toy. For decoration only.
- Choking hazard due to small parts.
- Keep all plastic and wire parts away from children.
- This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 and under.
- Do not turn on item until you have completed assembly.
- Stay clear of item while operating.
- Do not place weight on or obstruct item while operating
- PLEASE KEEP A COPY OF YOUR RECEIPT WITH THESE INSTRUCTIONS.

Questions about setup?
There's no need to go back to the store.
Ask the Zombie Tech Squad!
They're dying to bring your prop to life!



ZTechSquad@SpiritHalloween.com
1-866-586-0155

