 
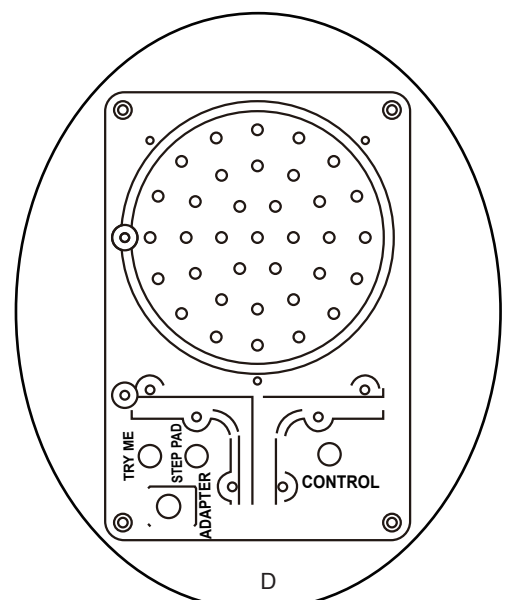 
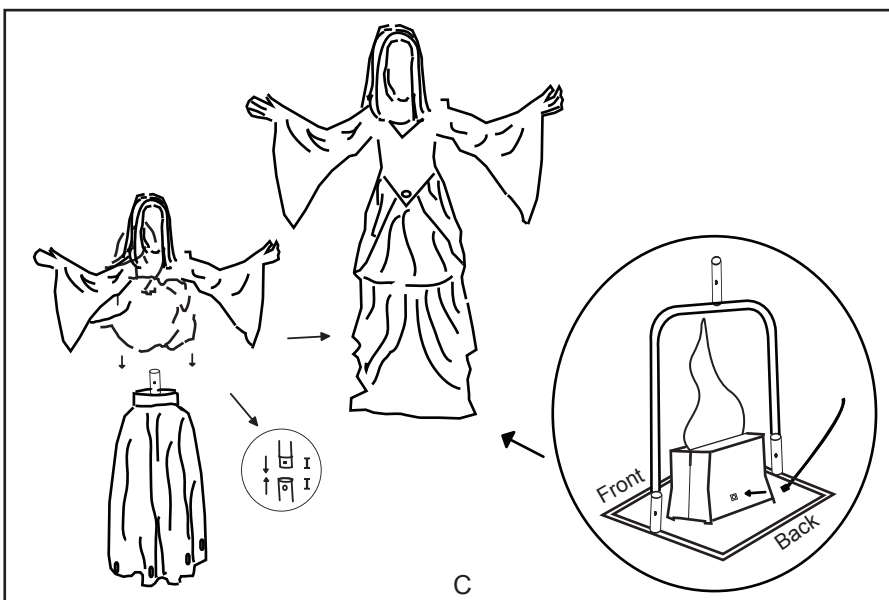 
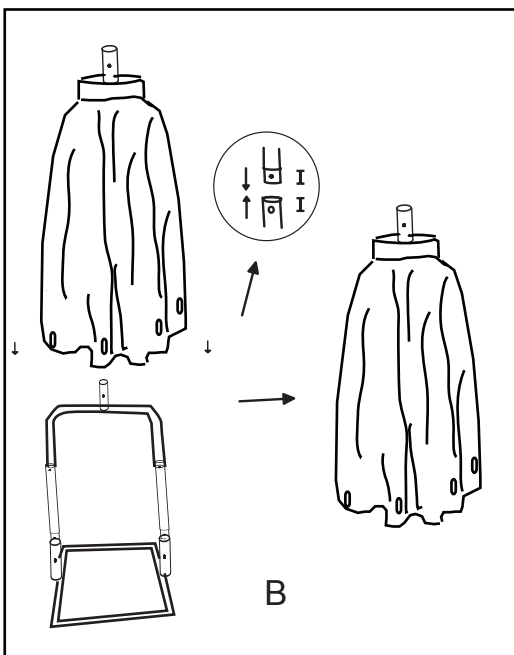 


Operating Instructions
(SKU# 01257674 YJ BLACK WIDOW)

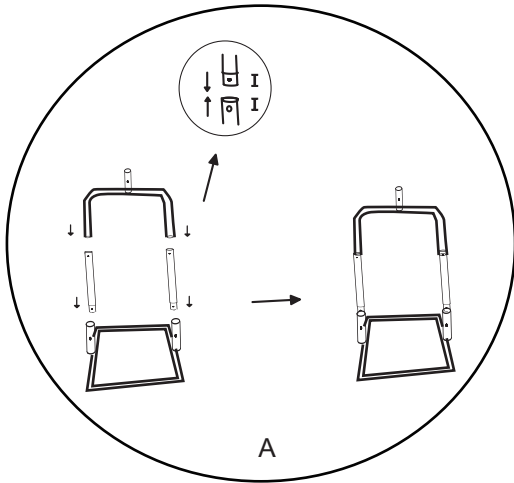

1. Carefully remove all of the parts from the package including: 1 Witch head with upper body, 1 lower body, 4 pieces of the metal frame, 1 flame light base and 1 fabric flame in brown box, 1 fabric veil, and 1 AC/DC adapter located in a small box.
2. Connect the metal poles to the metal stand as shown in diagram A. Line the spring pin up with the hole and rotate until they lock into place.
3. Connect the lower body to the metal stand as shown in diagram B. Line the spring pin up with the hole and rotate until they lock into place.
4. Connect the upper body to the lower body. Line the spring pin up with the hole and rotate until they lock into place.
5. Assemble the flame light by sliding the metal rod attached to the fabric into the base. Place the flame light on the ground in the center of the Witch's frame. Connect the pin from the back of the Witch to the jack at the back of the flame lights base as shown in diagram C. Pull the mesh fabric down from the Witch's dress to cover the frame and flame light. Use the Velcro to secure the mesh fabric to the bottom of the frame so the flame fabric does not get caught in the fabric once activated.
6. Adjust the Witch's dress until desired look is achieved. Put the fabric veil over the Witch's head.
7. Connect the AC/DC adapter pin in to the jack located on the speaker box on the back of the Witch. Once connected, plug the AC/DC adapter into the appropriate electrical outlet.
8. This item is equipped with a motion sensor. Simply pass in front of the item to activate it. To activate the item again, wait for the movements to completely stop and then pass in front of the prop again.
9. The prop is also equipped with a Step Pad feature. The Step Pad is not included, but is sold separately. To use the Step Pad function, plug the Step Pad jack into the speaker box and then plug the AC/DC adapter into the appropriate electrical outlet.
10. To adjust the volume of this product, turn the control knob as shown in diagram D.
11. When storing this product, unplug the adapter from the electrical outlet and carefully remove the product from where it has been displayed to avoid any undue strain or stress on the product.
12. When not in use, store neatly in a dry, cool location protected from sunlight.

MADE IN CHINA

Warnings: This prop is for decoration only and is not a toy.
 Not intended for use by children - Choking hazard due to small parts.
 Stay clear of the prop while operating
 Do not turn the prop on until you have completely finished assembling it.
 Keep electrical wires away from water.