

PARTS:



ASSEMBLY



Thread Zip-Tie (Part C) through channel at top of Inflatable Cotton Candy Ball (Part A).



Tighten zip-tie around narrow channel at base of Hanging Hook (Part B) and tuck excess back into channel at top of Inflatable Cotton Candy Ball (Part A).



Ensure air valve is lined up with the opening at rear of outer shell of Cotton Candy Ball (Part A). Open valve and inflate to 0.23 PSI.



Product is now ready to hang.

WARNINGS

- This product is designed for indoor or covered porch use only, and should not be placed outdoors subject to the weather.
- This item is not a toy. For decoration only.
- Choking hazard due to small parts.
- Keep all plastic and wire parts away from children.
- This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 and under.
- This is not a lifesaving device. Do not leave children unattended while device is in use. This item is a costume accessory. Do not use as a personal flotation device. This is not a lifesaving device.



Distributed by:
Spirit Halloween
6826 Black Horse Pike
Egg Harbor Twp.,
NJ 08234-4197
MADE IN CHINA